

Turbo air Speeds Up the Pace of Innovation

REFRIGERATOR MANUFACTURER
Turbo air

DELI-Case Unit Installation and Operation Manual

Please read this manual completely before attempting to install or operate this equipment!



TD-4R, TD-5R

TD-4, TD-5 (Non Refrigerated)

CONTENTS

| | |
|---------------------------------|-------|
| INTRODUCTION | 1 |
| SAFETY STICKERS | 2 |
| INSTALLATION INSTRUCTIONS | 3 |
| Inspection for damage | |
| Location of DELI-CASE | |
| Leveling of DELI-CASE | |
| PACKAGING MATERIAL | 4 |
| LIGHTS | 4 |
| SHELVES | 4 |
| ELECTRICAL INFORMATION | 5 |
| WIRING DIAGRAM | 6 |
| OPERATING IBSTRUCTIONS | 7 |
| Controls | |
| Anti Moisture | |
| How to place product | |
| Shelf placement | 7~8 |
| Replacement of light | 8 |
| MAINTENANCE & CLEANING | 9 |
| Cleaning daily | |
| Cleaning weekly | |
| Condenser Coil | 10 |
| TROBLE SHOOTING | 11 |
| DELI-CASE not working | |
| DELI-CASE warm | |
| Glass sweating | |
| Light not working | |
| WARRANTY STATEMENT | 12~15 |
| Load Line | 12 |
| SPECIFICATIONS | |
| DELI-CASE Unit | |

| MODEL | COMP H.P | V/Hz | REFERIGERANT | AMPS | WEIGHT |
|-------|----------|-----------|--------------|------|---------|
| TD-4R | 1/2 | 115V/60Hz | R-134a | 12 | 750 lbs |
| TD-5R | 1/2 | 115V/60Hz | R-134a | 12 | 825 lbs |
| TD-4 | - | 115V/60Hz | - | 1.1 | 640 lbs |
| TD-5 | - | 115V/60Hz | - | 1.1 | 695 lbs |

* TD-4, TD-5(Non Refrigerated)

INTRODUCTION

This owner's manual has important information. Please read the entire manual before installing your new Turbo air refrigerated DELI-Case.

After reading manual if you have any questions, please call free to call:

CUSTOMER SERVICE DEPARTMENT

TURBO AIR

1250 VICTORIA ST.

CARSON, CA 90746

1-800-381-7770

1-800-627-0032

Please write down model and serial number for making any reference to this unit.

CASE MODEL _____ **SERIAL NUMBER** _____

WARNING!

Failure to read this manual completely can result in personal injury or damage to the unit.

Keep manual in a safe place to refer to in the future.

WARNING!

Electrical must be installed by a licensed electrician.

On page 6 and 16 is information for electrician.

WARNING!

All electrical wiring must be done in accordance with all applicable standards.

Improper connections of electrical can result in death or severe injury.

Thank you for purchasing Turbo Air!

SAFETY STICKERS

The following signs are thru out Turbo Air DELI-Case. If any are missing, Please call Customer Service so the sticker can be sent to you.

DANGER HIGH VOLTAGE-This sticker is on back of DELI-Case.

CAUTION-This sticker is below the DELI display pan.

! CAUTION-This sticker is on back of DELI-Case.

Please follow all safety warnings on stickers. Make sure all employees understand warnings. Have all employees read manual for your and their safety.

Please be sure person who installs DELI-Case understands safety warnings and has read manual.

If service technician services unit make sure they understand safety warning on stickers. Please keep manual handy for future use for technician.

All stickers are placed for your protection. Please never remove stickers. If stickers become lost or damaged call Customer Service so the stickers can be replaced.

!!! When you see this symbol, please be alerted. This will be seen thru the manual and on stickers.

WARNING!

Please follow all instructions and all warnings for your safety.

INSTALLATION INSTRUCTIONS

INSPECTION FOR DAMAGE

Customer is responsible for checking for damage. First inspect crate as soon as it arrives. Prior to signing if crate is damaged make sure you note that on bill of lading.

If after uncrating there is concealed damaged and crate was in good condition you must call Customer Service at Turbo Air. Concealed damage must be reported within 24 hours of receiving unit. bill of lading will be requested faxed to claim department. Pictures may be requested of unit and crating.

LOCATION OF DELI-CASE

Installation clearance:

86 inch at the top, 20 inch at the rear and 12 inch at the each side.

! CAUTION; Damage to case and glass can result if pushed on. Do not push curved glass, end glass, doors or door frames.

Do not place DELI-Case in the following locations; near source of heat, excessive air movement, open doors, and direct sunlight.

Move the DELI-Case to the final location before removing shipping skid.

Condenser is in back of DELI-Case. Do not block inlet.

LEVELING OF DELI-CASE

Four leveling legs are provided for leveling DELI-Case.

Use a leveler to make sure unit is leveled on all four corners.

If unit is not leveled drainage of water will not drain properly and doors will not close properly. Leveling legs can be adjusted accordingly.

PACKAGING MATERIAL

Remove all tape that holds lift up glass and doors in place. Some residue will be left and this can be removed with glass cleaner.

Remove all plastic ties that hold shelves and brackets for shelves.

LIGHTS

Make sure lights are in their lamp holders. Also make sure plugs for lamp holders are completely plugged in. If they are loose it may cause lamp holder to burn.


SHELVES

To install shelves in desired position front glass must be open and rear doors removed.

Where shelf height is desired install the shelf support in shelf standard slot (see drawing)



Install shelves on rear shelf support as shown. Curved part of shelf must be toward rear of case if not air flow will be blocked. Snap shelf into retainer clip on the shelf support, this keeps shelf from moving (see drawing)

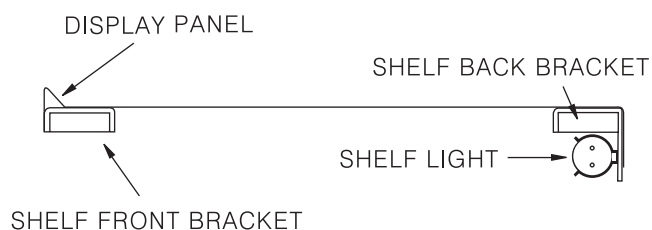

ELECTRICAL INFORMATION

!!! DELI-CASE MUST BE GROUNDED


Only a licensed electrician must install all electrical on DELI-Case.

All electrical must be done in accordance with applicable electrical standards.

A dedicated breaker is to be used for each DELI-Case.

Electrical must be grounded upon installation

An access hole is provided thru base of case for running electrical up through floor. Also a hole is provided in the back of unit to run electrical. Unit is designed to be hardwired by electrician. Electrical data is located next to electrical junction box (see drawing)

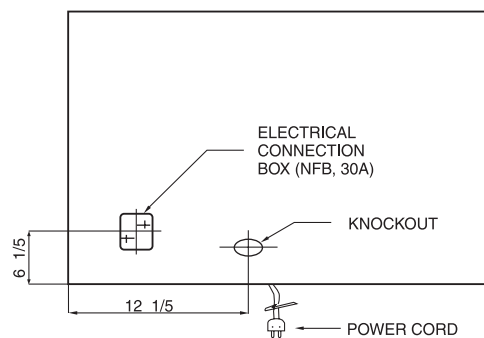

The DELI-Case comes with a power with a power cord. Cord is 9.8 feet long. the plug is a _____.

!!! Improper electrical connections can result in severe injury or death.

!!! Do not operate DELI-Case with panels or grill removed.


There are two back panels.

Right side panel has light switch, power switch, thermostat, and thermometer. Also compressor service ports, electrical condensate drain pan, fuses, and main board are accessible.


Left side panel allows access to electrical connection box, ballast, and also allows condenser unit to be pulled out.

Front panel is removable to have access to fans.

WIRING DIAGRAM(TD-4R, TD-5R)

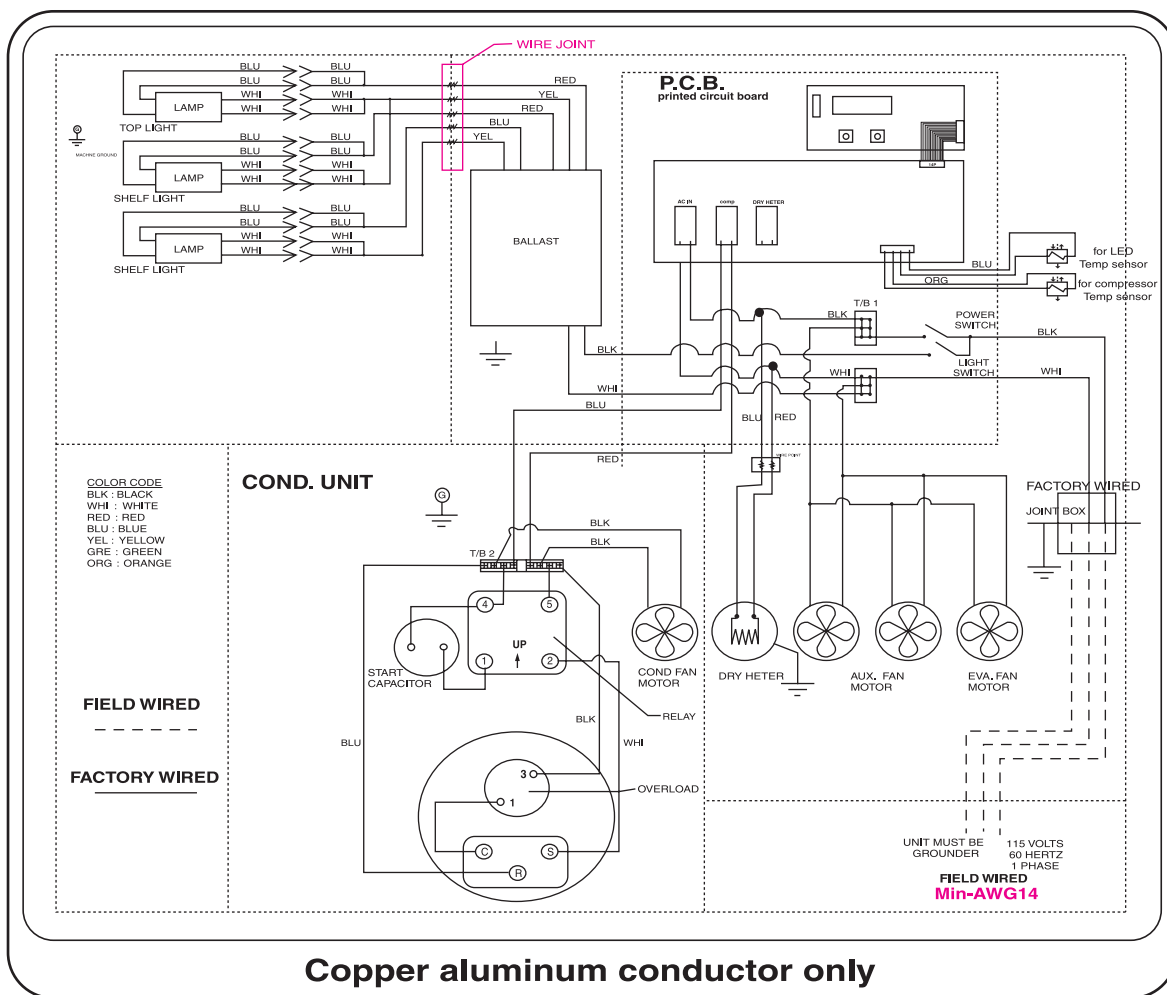

WIRING DIAGRAM(TD-4, TD-5)

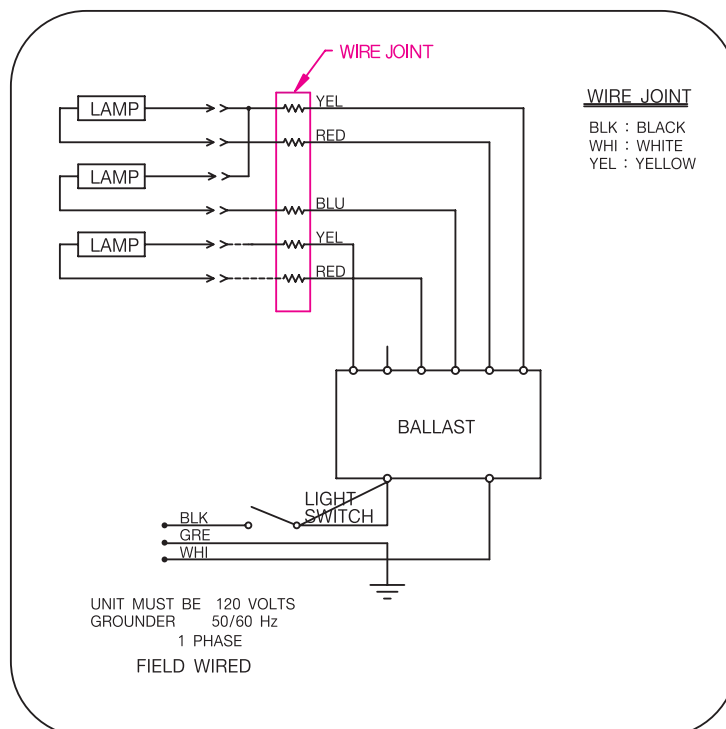

OPERATING INSTRUCTIONS

After installing unit and all electrical to DELI-Case, unit is ready to start up.

CONTROLS

POWER SWITCH: It is labeled with on/off position. It controls power to the entire DELI-Case.


LIGHT SWITCH: The switch controls the power to the lighting circuit. The switch rocker is red in the “on” position, black in the “off” position.

TEMPERATURE CONTROL:

TD-4R

TD-5R

1. The controller(thermostat) is located at the right inside of the unit.
2. The factory setting for the control is Normal
3. To lower temperature, depress down button to increase temperature, depress up button
4. This product is for controlling temperature from 34 °F to 48°F

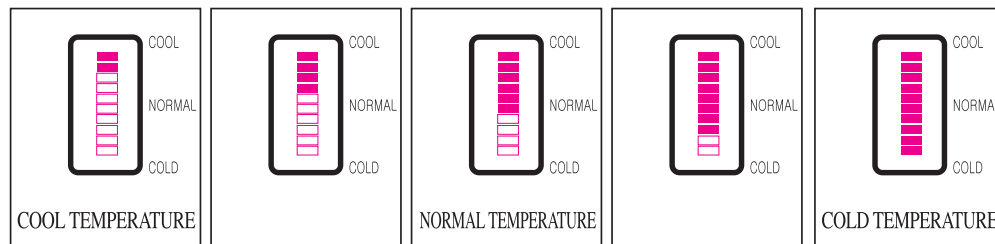

5. The thermostat controls compressor's on/off by sensing inside temperature.


THERMOMETER: Display changes temperature approximately every two seconds.

NOTE:

Before placing goods to DELI-Case wait for unit to reach desired temperature. Product must be cooled before placing in DELI-Case.

ANTI MOISTURE FANS: These fans run continuously when power switch is on. Two fans are at front bottom of unit. The fans blow warm air through vents and prevent from glass from getting moisture. Do not block vents because front glass will get moisture.

HOW TO PLACE PRODUCT: Check that display pans are positioned correctly before placing goods in DELI-Case(see drawing). Do not overstock shelves. Display pans should not hang over shelf. This will cause pan to block air flow and DELI-Case will warm up in temperature. This will cause product to spoil.

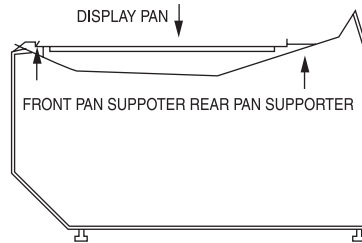

SHELF PLACEMENT:

The shelves can be installed slanted or straight. To make the shelf slanted do the following;

- a. Shelf needs to be removed from shelf support.
- b. Shelf support needs to be held at each end.
- c. Shelf support needs to be lifted at the back till bracket can be inserted into shelf standard slots.

Refer to drawing of pages 4.

ADJUSTING SHELF LEVEL

Shelves can be adjusted up or down. To move shelves do the following;

- a. Lights must be turned off.
- b. Grasp plug for light cord and unplug.
- c. Shelves must be removed from shelf support.
- d. Hold onto each end of shelf support.
- e. Shelf support needs to be moved up until it can be removed from shelf standard.
- f. Shelf can be repositioned in increments of two inches.

REPLACEMENT OF LIGHT

When replacing lights use same model of light installed in DELI-Case. Using wrong wattage can cause ballast to burn out or light not work.

To remove light there are two lamp holders one at each end of light. One has a spring in socket. Push light toward spring loaded lamp holder till other end of light pops out of other lamp holder.

Remove light from lamp shield and insert new light into lamp shield. Reinsert into lamp holders. Never install lamp without shield.

MAINTENANCE & CLEANING

!!! Always before cleaning DELI-Case unit should be turned off at power switch and lights should be turned off. Removed product and allow display to resch room temperature.

!!! Do not wet electrical components.

DELI-CASE SHOULD BE CLEANED THOROUGHLY BEFORE FIRST USE.

CLEANING DAILY

- a. Do not clean with detergents. Use a mild soap.
- b. If door track is dirty remove doors. Keeping door track clean allows for doors to slide easily. Food silicone can be sprayed on rollers and track.
- c. Clean glass with window cleaner.
- d. Exterior and interior can be cleaned with warm water and mild detergent.
- e. Wipe with damp cloth. Do not leave residue of soap.

CLEANING WEEKLY

This procedure is necessary to keep a sanitized DELI-Case. Procedure may have to be done more than once a week if necessary.

EXTERIOR CLEANING

- a. Clean front glass with window cleaner.
- b. Clean exterior with warm soapy water. Wipe down with damp cloth.

INTERIOR CLEANING


- a. Grasp plug for light cord and unplug.
- b. Remove shelves.
- c. Remove shelf support from shelf standard slots.
- d. Remove both thumb screws holding shelf standard and removed shelf standards.
- e. Remove display pans.
- f. Wash all parts with warm soapy water and rinse. Allow to dry.
- g. Clean inside of unit with warm soapy water. Wipe down with damp cloth. Allow to dry.
- h. Put unit back together in reverse order starting with step.

MAINTENANCE CONTINUED

CONDENSER COIL

- Turn off unit at power switch. Disconnect power to unit.
- Remove rear grill.
- Clean condenser by either brushing off with stiff wire brush or vacuuming with wet/dry vacuum. Condenser is black and looks like a radiator. This should be cleaned every month or as necessary. Keeping clean allows for maximum cooling of unit and long life of compressor.

LOAD LINE

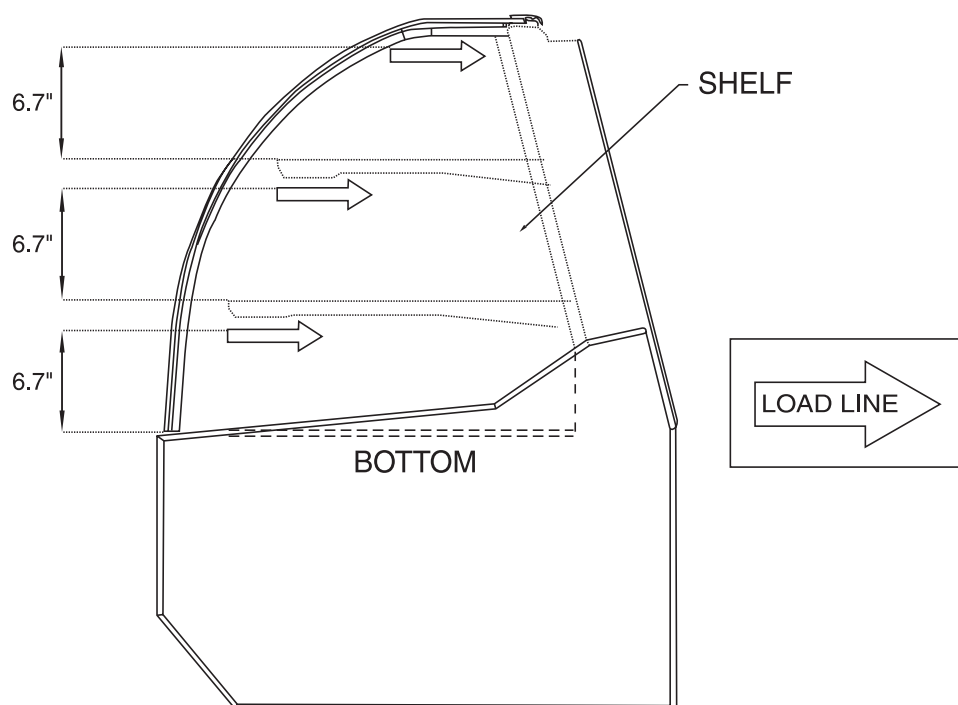

SIDE DRAW

" If food is placed above the load line, it will not be adequately refrigerated.
Please do not load food above load line"

TROUBLE SHOOTING

For any problems with DELI-Case please refer to following check list. If still having a problem or need to ask a question please call Customer Service at 1-800-381-7770 or 1-800-627-0032

DELI-CASE NOT WORKING

- a. Check to see if breaker is not tripped.
- b. Check power going to unit.
- c. Check thermostat is set at on position.
- d. Check power switch is on.

DELI-CASE WARM

- a. Check condenser to see if clean.
- b. Check that doors and curved glass are closed tightly.
- c. Check that shelves are installed properly.
- b. Check that air flow inside of unit is not blocked with product or pans.

GLASS SWEATING

- a. Check that there is nothing on top of curved glass.
- b. Check to see that there are no overhead vents, air ducts, or fans.
- c. Check temperature of room. DELI-Case is designed to operate in an ambient temperature of 75 degrees Fahrenheit and 55% relative humidity.
- d. Check temperature of DELI-Case. Unit should be between 37 and 40 degrees.
- e. Check that air is flowing inside front of DELI-case. if there is no air flow or air is felt on only one side this is due to anti moisture fans are not working. Customer Service needs to be called.

LIGHTS NOT WORKING

- a. Check that light switch is on.
- b. Check that lamp cord is plugged in correctly.
- c. Check that light is in lamp holder correctly.

WARRANTY STATEMENT

Warranty Claims

All claims for labor or parts must be made directly through Turbo Air.

If unit was manufactured more than one year, proof of purchase must be faxed in or sent with claim.

All claims should include: model number of the unit, the serial number of the cabinet, and all pertinent information supporting the existence of the alleged defect.

If compressor is replaced under warranty, Turbo air will either request the compressor or compressor tag be returned.

Compressor or tag must be returned with all information related to the unit.

Any action or breach of these warranty provisions must be commenced within one year after said cause of action has occurred.

One Year Parts & Labor Warranty

Turbo Air warrants to the original purchaser of every new Turbo Air refrigerated unit, the cabinet and all parts thereof, to be free from defects in material or workmanship, under normal and proper use and maintenance service as specified by Turbo air and upon proper installation and start-up in accordance with the instruction packet supplied with each Turbo Air unit.

Turbo Air's obligation under this warranty is limited to a period of one (1) year from the date of original installation or 15 months after shipment date from Turbo Air, whichever occurs first.

Any parts, covered under this warranty, that are determined by Turbo Air to have been defective within one (1) year of original installation or fifteen (15) months after shipment date from manufacturer, whichever occurs first, is limited to the repair or replacement, including labor charges, of defective parts or assemblies.

The labor warranty shall include standard straight time labor charges only and reasonable travel time, as determined by Turbo Air.

Additional Four Compressor Warranty

In addition to the one (1) year warranty stated above, Turbo Air warrants its hermetically sealed compressor to be free from defects in both material and workmanship under normal and proper use and maintenance service for a period of four (4) additional year from the date of original installation, but not to exceed five (5) years and three (3) months after shipment from the manufacturer.

Compressor determined by Turbo Air to have been defective within this extended period will, at Turbo Air's option, be either repaired or replaced with a compressor or compressor parts of similar design and capacity.

The four (4) year extended compressor warranty applies only to hermetically sealed parts of the compressor and does not apply to any other parts or components, including, but not limited to, cabinet, paint finish, temperature control, refrigerant, metering device, directs, motor starting equipment, fan assembly or and other electrical component, etcetera.

404A / 134A Compressor warranty

The four-year compressor warranty detailed above will be voided if the following procedure is not carefully adhered to:

1. This system contains R404A or R134A refrigerant and poly-ester lubricant.
The poly-ester lubricant has rapid moisture absorbing qualities.
2. Direct replacement is very important and must be changed when system is opened for servicing.
A 620 copper drier or better is highly recommended.
3. Micron level vacuums must be achieved to insure low moisture levels in the system.
500 microns or lower must be obtained.
4. When compressor is grounded, suction filter drier and 620 drier or better must be replaced.
5. Compressor must be obtained through Turbo Air Inc., unless otherwise specified in writing, through Turbo Air's warranty department.

What Is Not Covered By This Warranty

Turbo Air's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additional limitations below.

This warranty neither assumes nor authorizes any person to assume obligations other than those expressly covered by this warranty.

No consequential damages.

Turbo air is not responsible for economic loss ; profit loss;
or special, indirect, or consequential damages, including without limitation, losses,
or damages arising from food or product spoilage claims whether or not because of
refrigeration failure.

WARRANTY IS NOT TRANSFERABLE

This warranty is not assignable and applies only in favor of the original
purchaser / user to whom delivered.

Any such assignment or transfer shall void the warranties herein made and shall void

All warranties, express or implied, including any warranty of merchantability or fitness

For a particular purpose.

IMPROPER USAGE.

Turbo air assumes no liability for parts or labor coverage for component failure or other
damages resulting from improper usage or installation or failure to clean and / or
maintain product as set forth in the warranty packet provided with the unit.

ALTERATION, NEGLIGENCE, ABUSE, MISUSE, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION, FIRE, FLOOD, ACTS OF GOD.

Turbo Air is not responsible for the repair or replacement of any parts that Turbo Air
determines have been subjected after the date of manufacture to alteration, neglect, abuse,
misuse, accident, damage during transit or installation, fire, flood, or act of God.

IMPROPER ELECTRICAL CONNECTIONS

Turbo air is not responsible for the repair or replacement of failed or damaged component Resulting from electrical power failure, the extension cords, low voltage, or voltage drops to the unit.

NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE:

There are no other warranties, expressed, implied or statutory, except the one (1) year Parts & labor warranty and the additional four (4) year compressor warranty as described above.

These warranties are exclusive and instead of all other warranties, including implied Warranty and merchantability or fitness for a particular purpose.

These are no warranties, which extend beyond the description on the face hereof.

OUTSIDE U.S.AND CANADA:

This warranty does not apply to, and Turbo Air is not responsible for, any warranty claims made on products sold or used outside the United state and Canada.

REFRIGERATOR MANUFACTURER
Turbo air

1250 Victoria street
carson, CA 90746

U.S.A & Canada Toll Free 1-800-627-0032

For Service 1-800-381-7770

TEL:310-900-1000

FAX:310-900-1077

www.turboairinc.com

