

Turbo air Speeds Up the Pace of Innovation

REFRIGERATOR MANUFACTURER
Turbo air

CAUTION!

**PLEASE KEEP POWER SWITCH ON
BEFORE OPERATING FREEZER**

Refrigerator

Freezer

Installation and Operation Manual

Please read this manual completely before attempting to install or operate this equipment!



Refrigerator

TSR-23SD

TSR-49SD

TSR-72SD

Freezer

TSF-23SD

TSF-49SD

TSF-72SD

Full Stainless Steel Interior and Exterior

CONTENTS

	PAGE
1. SPECIFICATION	2
2. SERIAL NUMBER	2
3. INSTALLATION	3
4. CLEANING	4
5. BASIC OPERATION	
5-1. REFRIGERATORS	5~8
5-2. FREEZERS	9~12
6. BEFORE REQUESTING SERVICE	13
7. WARRANTY	14~15

SPECIFICATION

Refrigerators

MODEL	COMP H.P.	V/Hz	REFRIGERANT	AMPS	WEIGHT
TSR-23SD	1/3	115V/60Hz	R-134a	5.5A	265lbs
TSR-49SD	1/2	115V/60Hz	R-134a	9.2A	397lbs
TSR-72SD	1/2	115V/60Hz	R-134a	11A	530lbs

Freezers

MODEL	COMP H.P.	V/Hz	REFRIGERANT	AMPS	WEIGHT
TSF-23SD	1/3	115V/60Hz	R-404a	7.8A	265lbs
TSF-49SD	3/4	115V/60Hz	R-404a	13A	397lbs
TSF-72SD	1	115V/208~220V/60Hz	R-404a	10A	540lbs

SERIAL NUMBER

The serial number is located on the data label inside.

Please retain the unit's serial number for service purpose.

INSTALLATION

1. GOOD AIR CIRCULATION

- Be sure to avoid any partition and object which may stop the air flow.
- Be sure that air space is allowed to flow the rear of the unit.
Turbo air recommends that the rear of the unit would be no less than 5 inches from the wall.

2. PLACE ON STRONG GROUND

- Be sure that the location be chosen has a strong enough floor to support the total weight of the cabinet and any other contents.

3. DO NOT PLACE NEAR HEAT

- Be sure to avoid hot corners and locations near stoves.
- High ambient temperature will make much lower cooling efficiency.

4. INDOOR USAGE ONLY

- Be sure to install this unit indoor.
- So, It should prohibit getting wet from the rain.

5. STABILIZING

- Make sure the unit is installed in a stable condition with the front wheels locked while in use.

6. LEVELING

- Be sure that the unit levels from the front to the back and side to side.

CLEANING

1. CLEANING THE INTERIOR AND EXTERIOR

- The interior and exterior of the unit can be cleaned using warm water with soap.
- Do not use an abrasive cleaner because it will scratch the stainless steel surface.

2. CLEANING THE CONDENSER FINS

- To maintain proper refrigeration performance, the Condenser coil must be free of dust, dirt, and grease.

This will require periodic cleaning. Condenser fins should be cleaned at least every three months (90 days) or as needed.

3. CLEAN THE GASKET

- The door gasket should be cleaned frequently to maintain proper sealing.


4. CHECK AFTER CLEANING

- Check the unit again for safety.
- Check that the unit is operating properly.

CAUTION

1. POWER CORD

- Be sure that the power cord is connected to the proper voltage.
- A protected circuit of the correct voltage and amperage must be run for connection of the line cord.
- Turn 'off' the power switch before disconnecting the power cord, whenever performing maintenance functions or cleaning the refrigerated cabinet.
- Dual voltage freezer (TSF-72SD) requires receptacle as shown the right sides.
- Compressor warranties are void if compressor burns out due to low voltage.

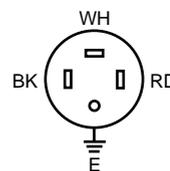

2. RE-STARTING

- If disconnected, wait for 5 minutes before re-starting.


BASIC OPERATION

TSR-23SD
TSR-49SD
TSR-72SD

REFRIGERATORS

1. Plug in and turn on the power switch located on the bottom of the top grille right side. The Display panel will be lighted and make a beep sound. The compressor will begin to run.
2. The default temperature setting is No. "5".
3. The compressor is automatically cycled by the electronic controller (PCB, D-Sensor).
4. The Defrost cycle is automatically controlled by the R-sensor, and the PCB.
5. Set level toward "1" for higher temperature and toward "9" for lower temperature.
6. The interior light is activated by the rocker switch at the bottom of the grille when the door is opened.
7. Evaporator fan motor(s) will run after all doors are completely closed.

DISPLAY PANEL OF REFRIGERATOR

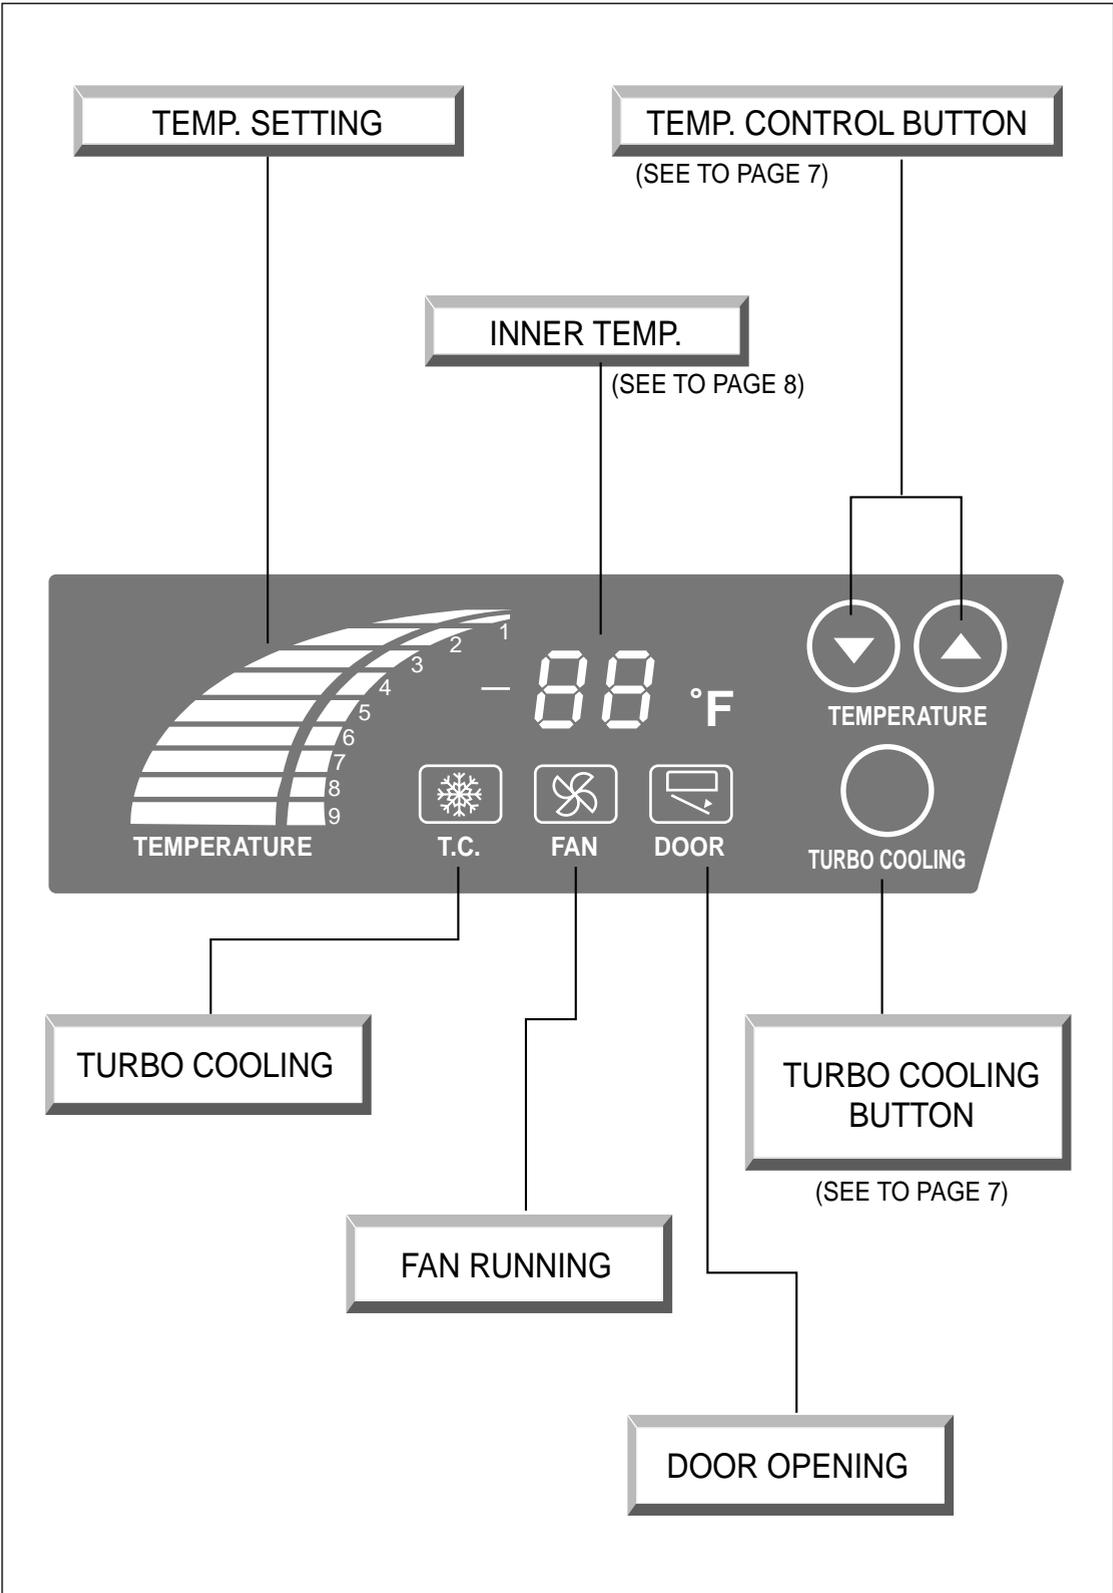

TURBO COOLING

1. If you push the T.C. (Turbo Cooling) button, the compressor will run continuously until D-Senser detect 14°F (-10°C) to bring down the temperature more quickly. (max.comp.run time = 120 min.)
2. If you push the T.C. button again during Turbo Cooling mode, the compressor will return to the normal operation.
3. During the Turbo Cooling mode works, the temperature Up/Down button will not affect the compressor's operation.

UP/DOWN BUTTON (Temperature control button)

1. By pushing the up/down button, you can set the inside temperature level from '1' to '9'.
2. If you want lower temperature, push the Down button to be lighted higher level numbers.

INNER TEMPERATURE DISPLAY

1. It displays the inside temperature.
2. Display range is 14°F to 69°F (-10°C ~ +20°C).
3. When the inside temperature is lower than 14°F, the panel will display 'LO'.

LO

and, higher than 69°F, the panel will display 'HI'.

HI

FAN RUNNING INDICATOR

1. If the fan motor is running, fan running indicator will be turned on.
2. Evaporator fan motor is activated when the door (both doors for TSR-49SD, all three doors for TSR-72SD) is closed.

DOOR OPENING INDICATOR

1. If any door is opened, door opening indicator will be turned on.
2. In case that any door was opened around 30 seconds, warning beep sound will be ring three (3) times.
3. In case of passing around 1 minute, warning beep sound will be ring again five (5) times.
4. In case of passing around 5 minutes, the beep sound will be ring continuously.
5. On all the conditions good, the beep sound will stop immediately if the door closed properly.

BASIC OPERATION


TSF-23SD
TSF-49SD
TSF-72SD

FREEZERS

1. Plug in and turn on the power switch located on the bottom of the top grille right side. The Display panel will be lighted and make a beep sound. The compressor will begin to run.
2. The default temperature setting is No. "5".
3. The compressor is automatically cycled by the electronic controller (PCB, F-Sensor).
4. The Defrost cycle is automatically controlled by the D-sensor, and the PCB.
5. Set level toward "1" for higher temperatures and toward "9" for lower temperatures.
6. The interior light is activated by the rocker switch at the bottom of the grille when the door is opened.
7. Evaporator fan motor(s) will run after all doors are completely closed.
8. Good Air Flow in freezer unit is critical.

Be careful to load product so that it neither presses against the back wall, nor reaches within four inches from the evaporator compartment.

DISPLAY PANEL OF FREEZER

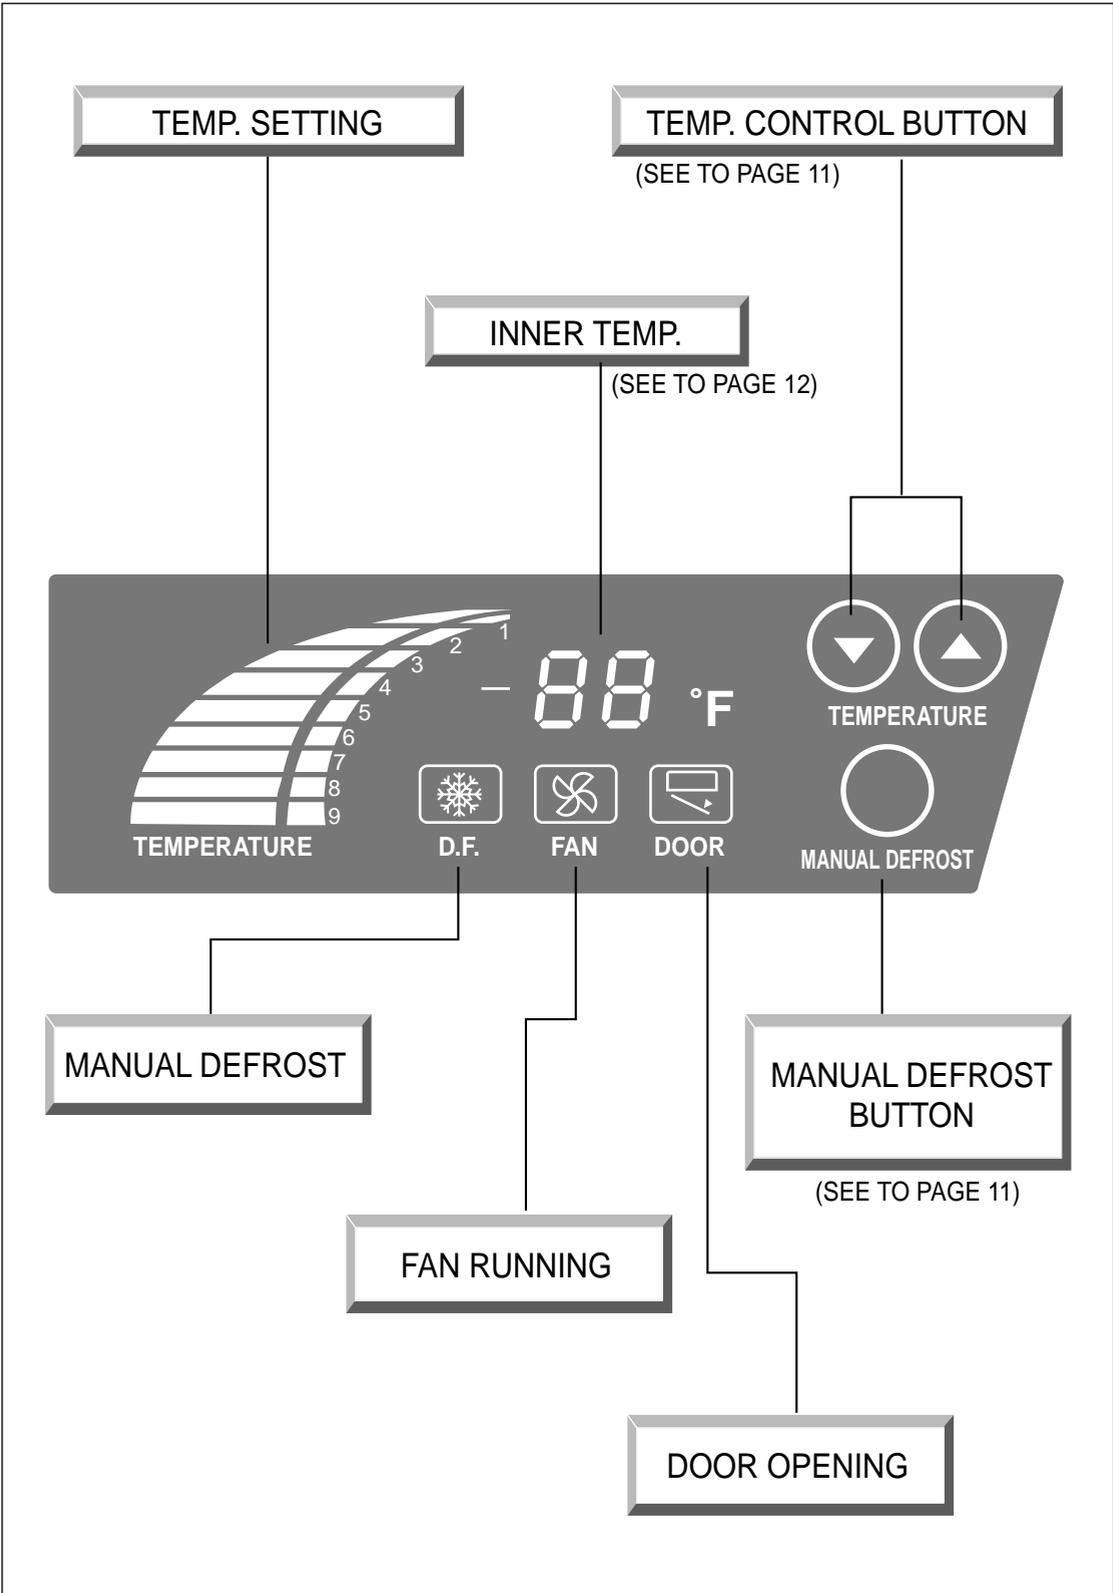

MANUAL DEFROST

1. If you push MANUAL DEFROST button for 5 seconds, the Defrost will start.
2. During the Manual Defrost mode, the Up/Down button for the temp, control can not make the compressor cycle ON or OFF.
3. If you want to change the Manual Defrost mode to the normal mode, push MANUAL DEFROST button for 5 seconds.

UP/DOWN BUTTON (Temperature control button)

1. By pushing the up/down button, you can set the inside temperature level from '1' to '9'.
2. If you want lower temperatures, push the Down button to be lighted higher level numbers.

DEFROST

1. The electronic defrost controller is set at the factory to provide a defrost cycle every 6 hours (4 times per a day).
2. If it is necessary to change the intervals of defrost due to unusual operating conditions, it can be accomplished by adjusting the switch which is located on the inside of the top grille.
3. Once all frost is eliminated, the temperature continues to rise until it reaches 60°F (15°C). When this temperature is sensed by the defrost limit control, the defrost control changes to refrigeration mode.
4. The panel displays “dF ” during the defrost cycle.



INNER TEMPERATURE DISPLAY

1. It displays inside temperature.
2. Display range is -50°F to 50°F (-45°C ~ +10°C).
3. When inside temperature is lower than -50°F, the panel will display 'L 0'.

88

and, higher than +50°F, the panel will show 'Hi'.

88

FAN RUNNING INDICATOR

1. If the fan motor is running, fan running indicator will be turned on.
2. Evaporator fan motor is activated when the door (both doors for TSF-49SD, all three doors for TSF-72SD) is closed.

DOOR OPENING INDICATOR

1. If any door is opened, door opening indicator will be turned on.
2. In case that any door was opened around 30 seconds, warning beep sound will be ring three (3) times.
3. In case of passing around 1 minute, warning beep sound will be ring again five (5) times.
4. In case of passing around 5 minutes, the beep sound will be ring continuously.
5. On all the conditions good, the beep sound will stop immediately if the door closed properly.

BEFORE REQUESTING SERVICE

SYMPTOMS	CAUSES	SOLUTIONS
Freezer is melting food.	<ul style="list-style-type: none"> • The controller is set too high to contain food fresh. 	<ul style="list-style-type: none"> • Turn the temperature dial to a warmer position.
The unit does not refrigerate at all.	<ul style="list-style-type: none"> • There is a power connection failure problem. 	<ul style="list-style-type: none"> • Check the power cord and plug in it correctly.
The unit does not refrigerate well.	<ul style="list-style-type: none"> • The unit is in sunlight or near a heating device. • The unit contains hot food or too much food. • The unit door is opened too frequently or left open long. • The temp. dial is not on the correct position. • The condenser is clogged. 	<ul style="list-style-type: none"> • Check the installation place. • Check the condition of stored food. • Check the position of the temp control dial.
There is a loud noise.	<ul style="list-style-type: none"> • The floor is too weak or the leveling feet is set incorrectly. • The back-side of the unit is too close to the wall. • The tray is not in the correct position. 	<ul style="list-style-type: none"> • Check the installation and adjust the tray position.
There are dew-drops on the unit exterior.	<ul style="list-style-type: none"> • High-moisture air can produce dewdrops during rainy season. 	<ul style="list-style-type: none"> • Wipe with a dry cloth.
There are dew-drops on the unit interior.	<ul style="list-style-type: none"> • The door is opened too frequently or left open long. • Damp food is stored. 	<ul style="list-style-type: none"> • Keep the door closed to remove dewdrops.
The door does not close tightly.	<ul style="list-style-type: none"> • The door is bent. • The unit is a levelling failure. • The door gasket has come out. 	<ul style="list-style-type: none"> • Level the unit again. • Reposition the gasket.

The following points are not malfunctions:

- A water-flowing sound can be heard when the compressor stops. This is the sound of REFRIGERANT flowing.
- The compressor does not run against defrosting function.

WHAT IS NOT COVERED BY THIS WARRANTY

Turbo air's obligation under warranty is limited to either repair or replacement of parts, subject to the additional limitations below. This warranty neither assumes nor authorizes any person to assume obligations other than expressly covered by this warranty.

1. **WARRANTY IS NOT TRANSFERABLE.** This warranty is not assignable and applies in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, express or implied, including any warranty of merchantability or fitness for a particular purpose.
2. **NO CONSEQUENTIAL DAMAGES.** Turbo air is not responsible for economic loss: profit loss or special, indirect, or consequential damages, including without limitation, losses or damages arising from food or product spoilage claims whether or not on account of refrigeration failure.
3. **ALTERATION, NEGLIGENCE, ABUSE, MISUSE, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION, FIRE, FLOOD, ACTS OF GOD.** Turbo air is not responsible for the repair or replacement of any parts that Turbo Air determines have been subjected after the date of manufacture to alteration, neglect, abuse, misuse, accident, damage during transit or installation, fire, flood, or an Act of God.
4. **NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.** There are no other warranties, express, implied or statutory, except the one(1) year warranty and the additional four(4) year compressor warranty as described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof.
5. **TRANSPORTATION COSTS.** Turbo Air will accept parts covered under this warranty freight collect, provided that shipment has received prior approval. Turbo Air is not responsible for any other transportation costs, but will ship freight collect parts either repaired or replaced under these warranties.
6. **WARRANTY CLAIMS.** All claims should include: model number of the cooler, the serial number of the cabinet, proof of purchase, date of installation, and all pertinent information supporting the existence of the alleged defect. Any action or breach of these warranty provisions must be commenced within one (1) year after that cause of action has accrued.



1250 Victoria street
CARSON, CA 90746
TEL: (562) 981-0123
FAX: (562) 981-0124